



Original Instructions

PERSONNEL HOIST

BETA MAX

MC2000PMB D



PARTS MANUAL

Rev. 1.0 - 2016

1895 Robert J. Conlan Blvd
Palm Bay, FL 32905
P: 800.233.5112 --- F: 321.768.9517
www.betamaxhoist.com

Descriptions and photos are only to be considered as pure illustrations. They may or may not be exact representation due to updated and revised changes made to the product.

 
According to continuous technological innovations, Beta Max, Inc. reserves the right to make any modifications with the intention of improving the product without notice.

All rights reserved.

Copyright © 2016 BETA MAX, Inc.


Reproduction of this document by any means, in whole or in part, is prohibited without the authorization of BETA MAX, Inc.

Sections Exploded View

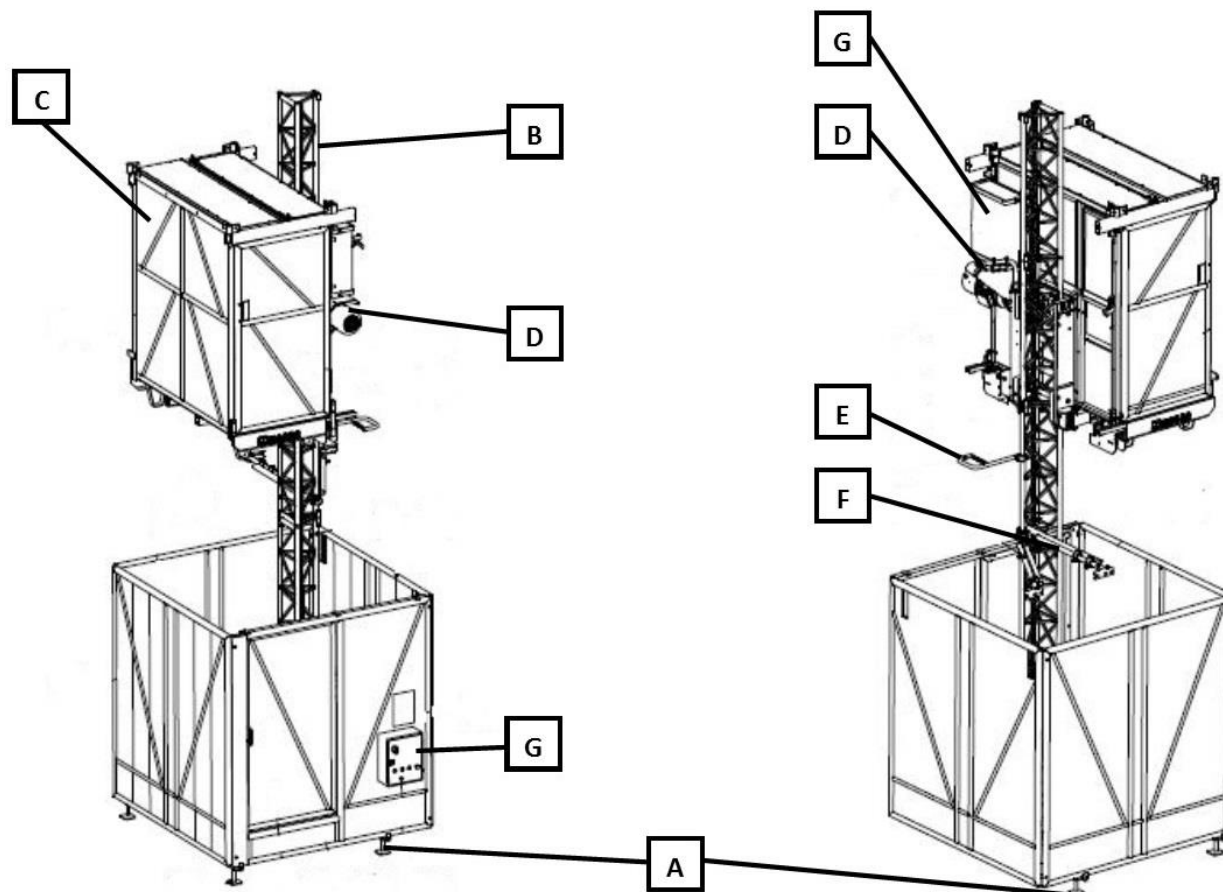

Item	Description	Page Number	Notes
A	Base Unit	1	----
B	Vertical Mast Section	7	----
C	Loading Unit	9	----
D	Lifting Unit	17	----
E	Electric Cable Guide Unit	27	----
F	Wall Tie Assembly	29	----
G	Electrical Control System	31	----
H	Accessories	43	----

 
Section A – Base

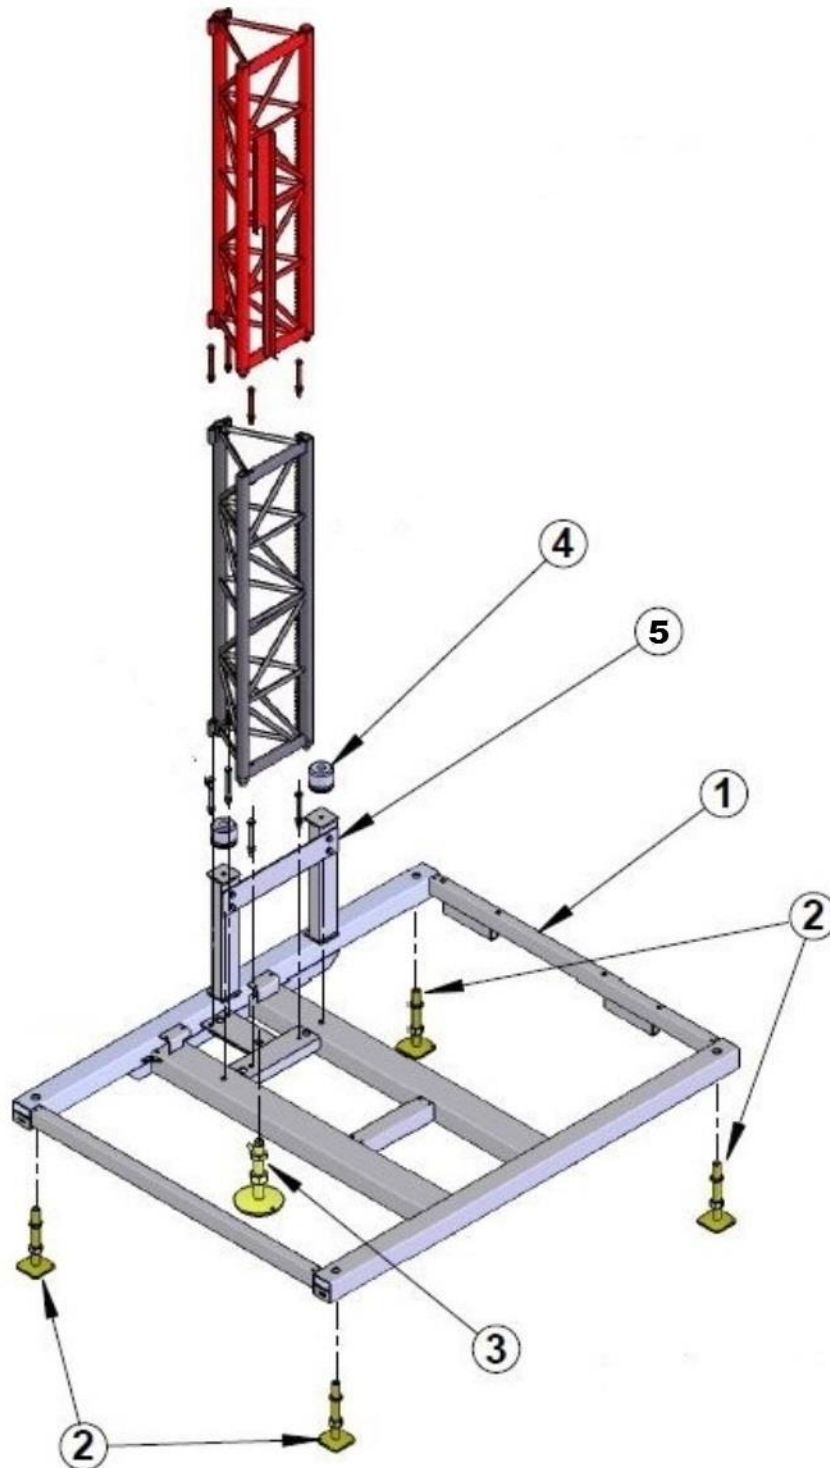




Item	Part Number	Description	Notes
--	##	Complete Base Assembly	----
1	10-958-1	Base	----
2	10-273	Screw Jack, Complete	----
3	10-274	Screw Jack, Mast Base	----
4	30-225	Spring Buffer	----
5	10-482	Spring Buffer Stand	----
--	10-764	Cam, Down Stop	(Not Shown)
--	10-765	Mounting Bracket, Down Terminal Stops	(Not Shown)
--	10-766	Cam, Down Overtravel	(Not Shown)

 Ground Enclosure

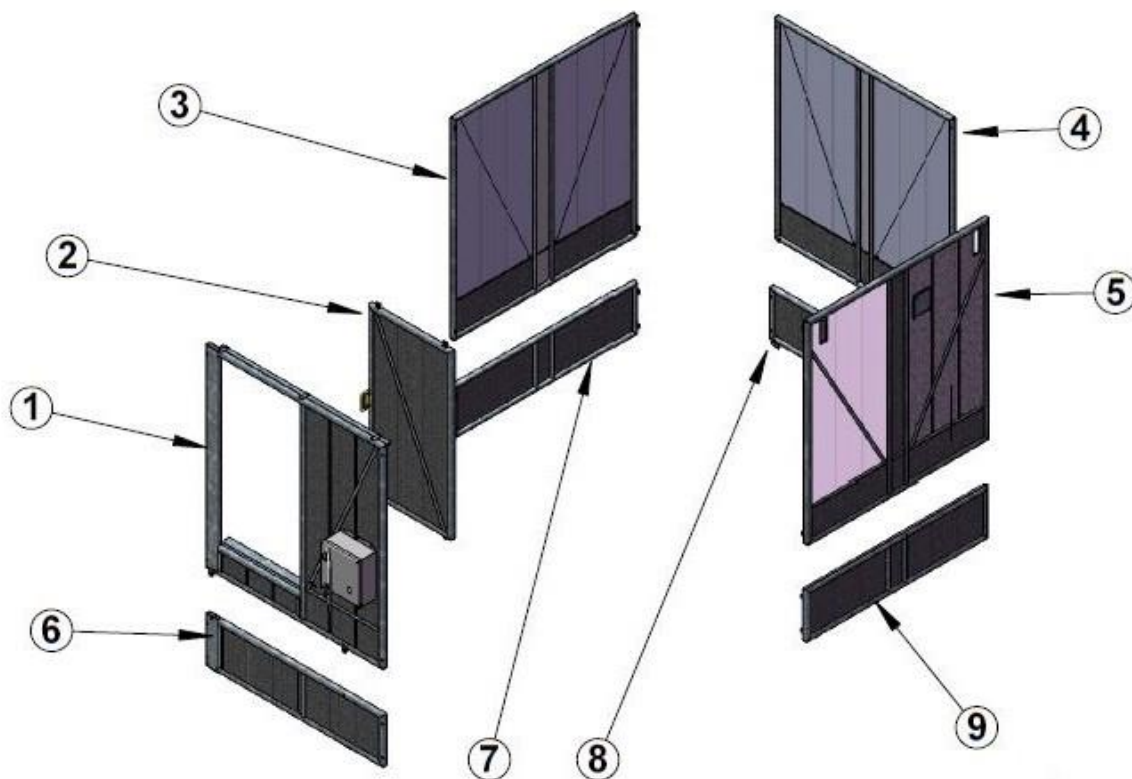


Item	Part Number	Description	Notes
--	10-945	Complete Ground Enclosure	Electrical Box not Included
1	10-963	Ground Enclosure, Front	----
2	30-392	Sliding Door	----
3	10-960	Ground Enclosure, Left	----
4	10-962	Ground Enclosure, Rear	----
5	10-961	Ground Enclosure, Right	----
6	30-399	Ground Skirt, Front	----
7	30-397	Ground Skirt, Left	----
8	30-398	Ground Skirt, Rear	----
9	30-397	Ground Skirt, Right	----
10	10-483	Base Enclosure Extension	(Not Shown)

 Ground Enclosure, Front

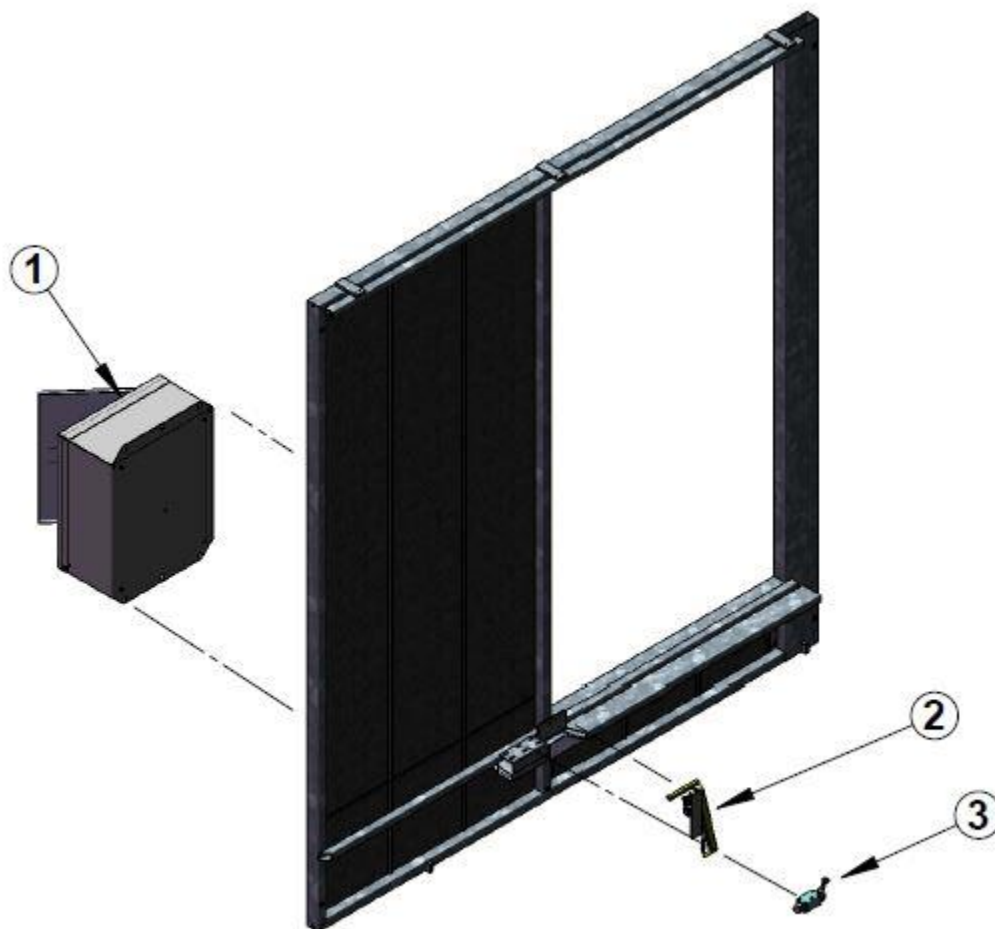

Item	Part Number	Description	Notes
--	10-963	Front Panel Assembly	----
1	10-883-1	Ground Controls Enclosure	----
2	10-272	Ground Enclosure Door Lock	----
3	00000000001347	Limit Switch	----

 Sliding Door

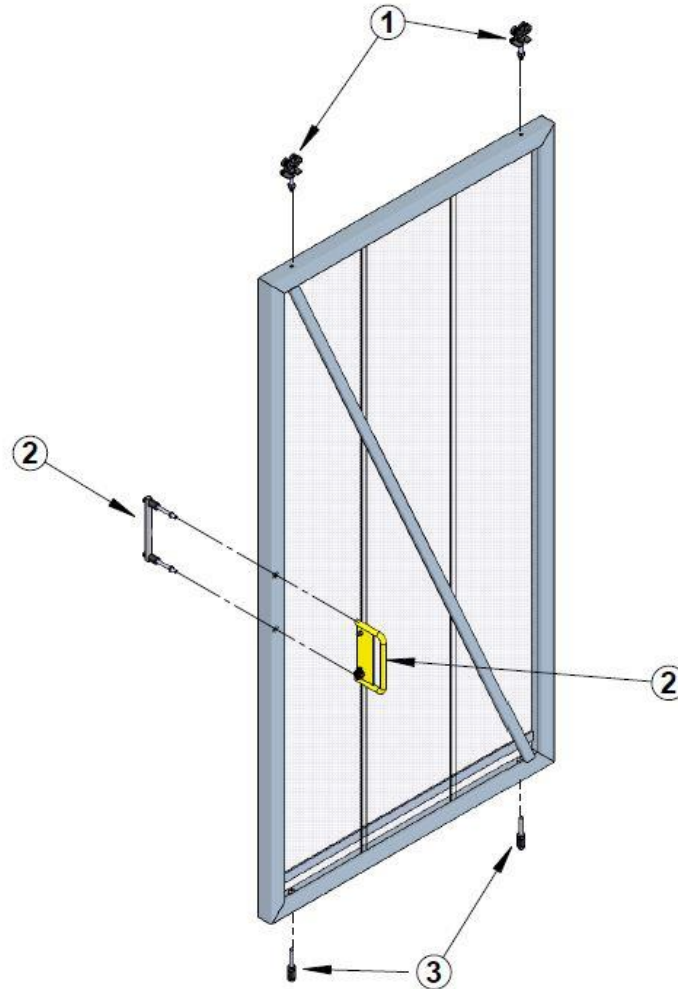


Item	Part Number	Description	Notes
--	30-392	Sliding Door Assembly	----
1	10-392	Ground Enclosure Door Rollers	----
2	10-266	Door Handle	----
3	30-270	Door Guide Pins	----



This page has been left blank for formatting purposes

 Section B – Mast Sections

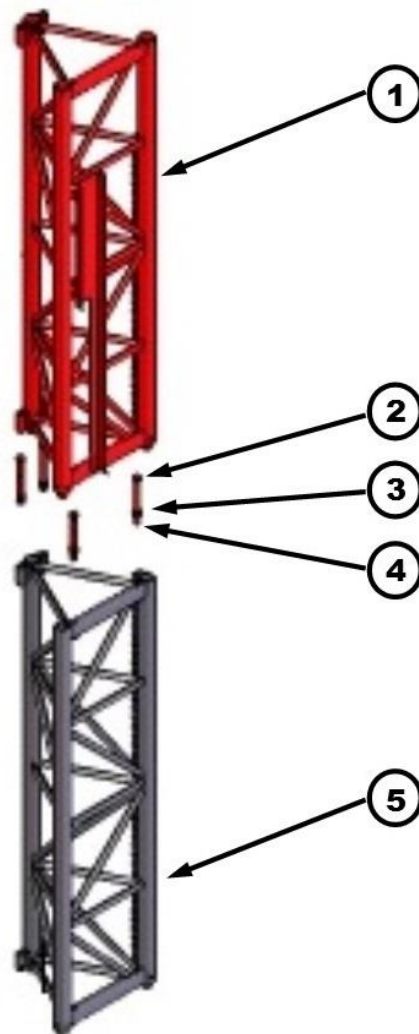


Item	Part Number	Description	Notes
1	30-960	Mast, Top Safety	----
2	10-322	Bolt, 16mm x 160mm	----
3	000000000001163	Nut, 16M Nylock	----
4	000000000001016	Washer, 16M	----
5	10-933	Mast	----




This page has been left blank for formatting purposes

 Section C – Loading Unit

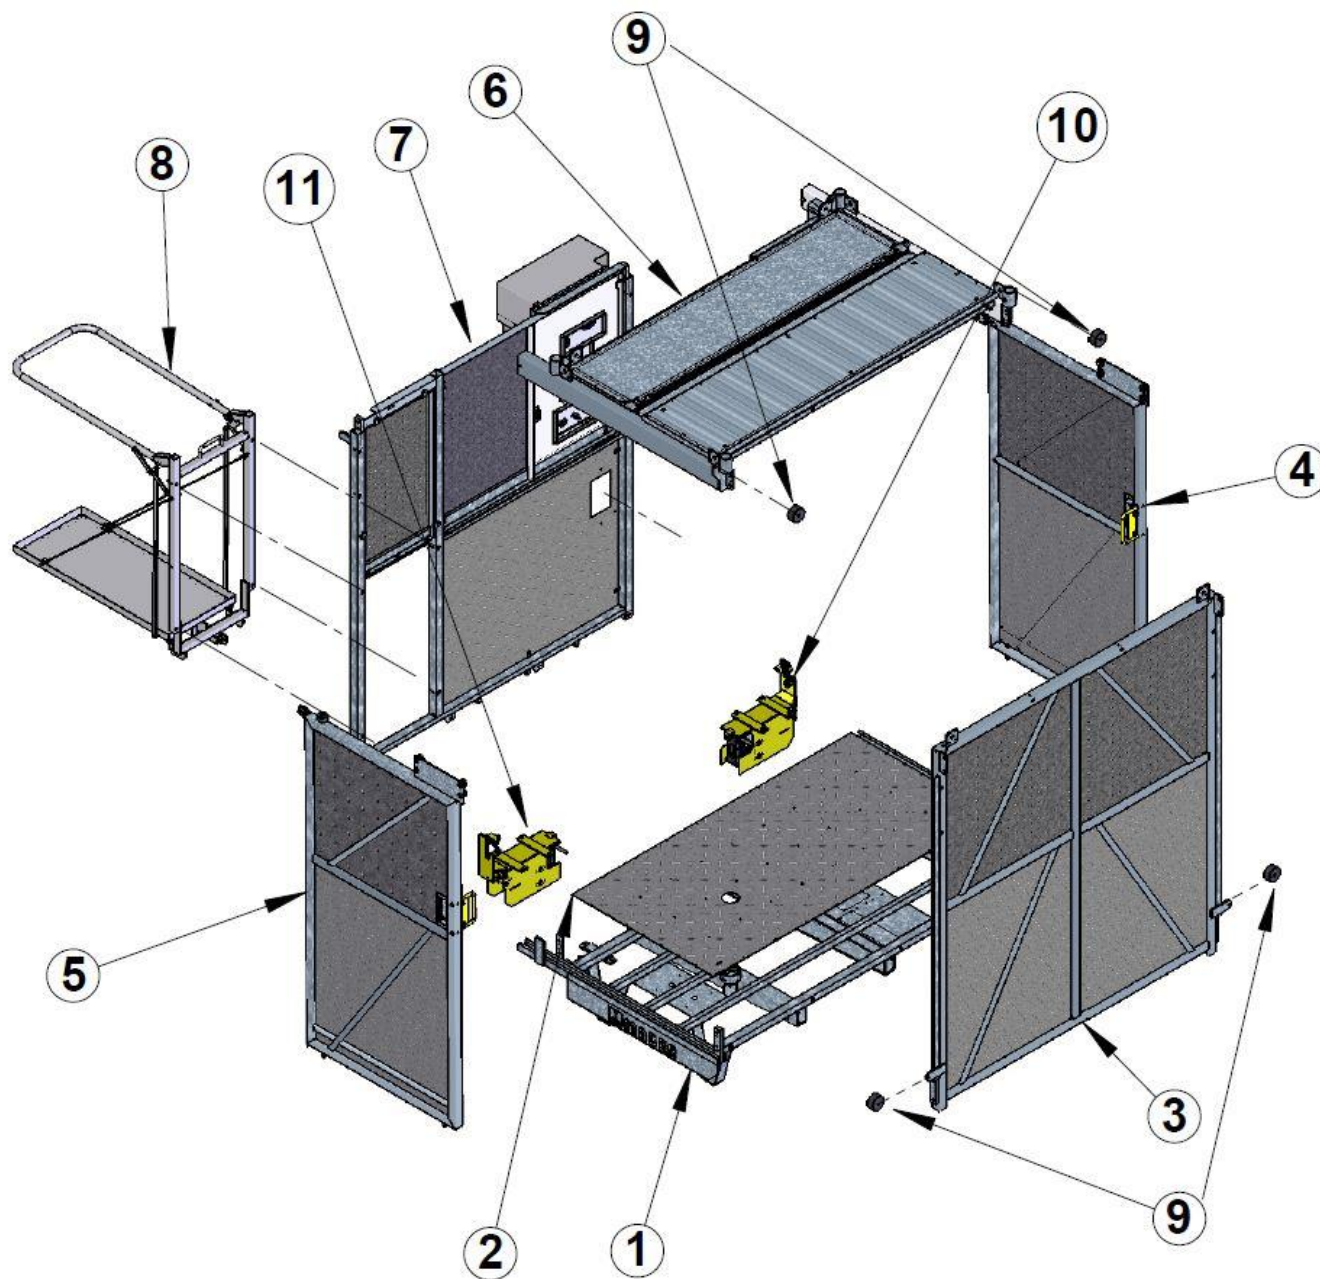


Item	Part Number	Description	Notes
--	##	Loading Unit	----
1	##	Loading Unit Base	----
2	##	Loading Unit Floor	----
3	10-617	Loading Unit Front Panel	----
4	30-388	Entry Door	----
5	##	Exit Door	----
6	##	Roof Hatch Assembly	----
7	##	Loading Unit Back Panel Assembly	----
8	##	Erection Platform	----
9	30-271	Loading Unit Guide Rollers	----
10	##	Entry Door Lock	----
11	##	Exit Door Lock	----

 Loading Unit Entry/Exit Door

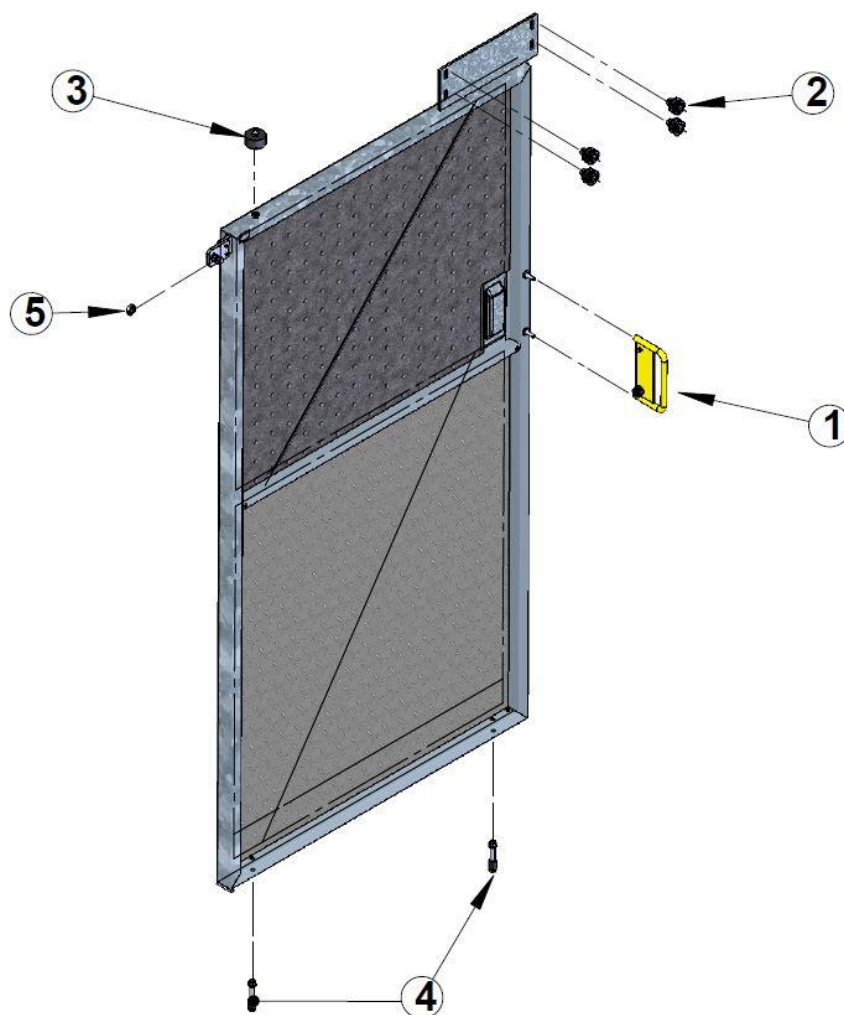


Item	Part Number	Description	Notes
--	30-388	Entry Door Assembly	----
--	##	Exit Door Assembly	
1	10-266	Loading Unit Door Handle	----
2	10-965-1	Loading Unit Door Hanging Roller	----
3	10-965	Roller, Door Alignment	----
4	30-270	Cabin Door Guides	----
5	00000000002113	Cabin Door Guide Roller	----

 Roof Hatch Assembly

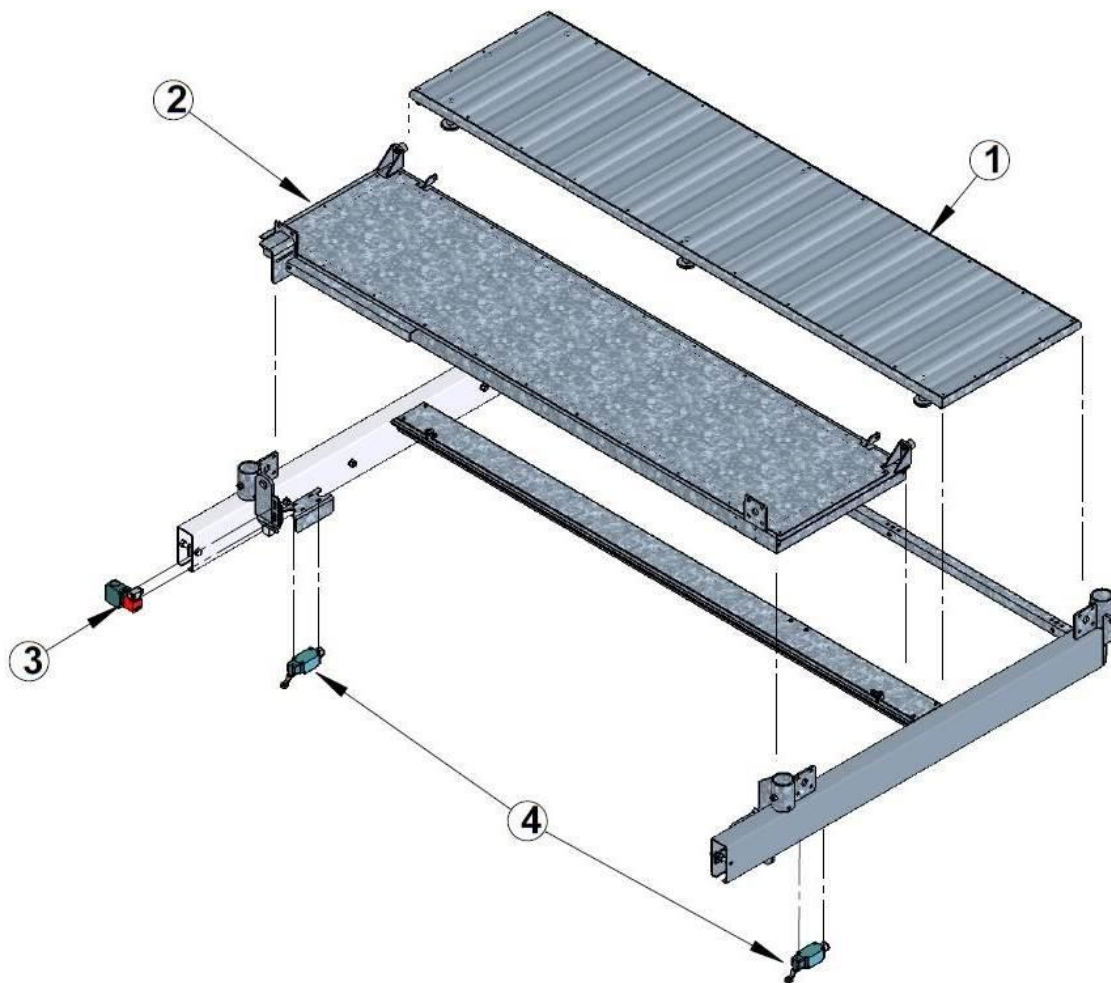


Item	Part Number	Description	Notes
--	##	Roof Hatch Assembly	----
1	10-494	Roof Panel	----
2	10-495	Roof Hatch	----
3	00000000001491	Limit Switch Keyed	----
4	00000000001347	Door Position Limit Switch	----

 REAR PANEL

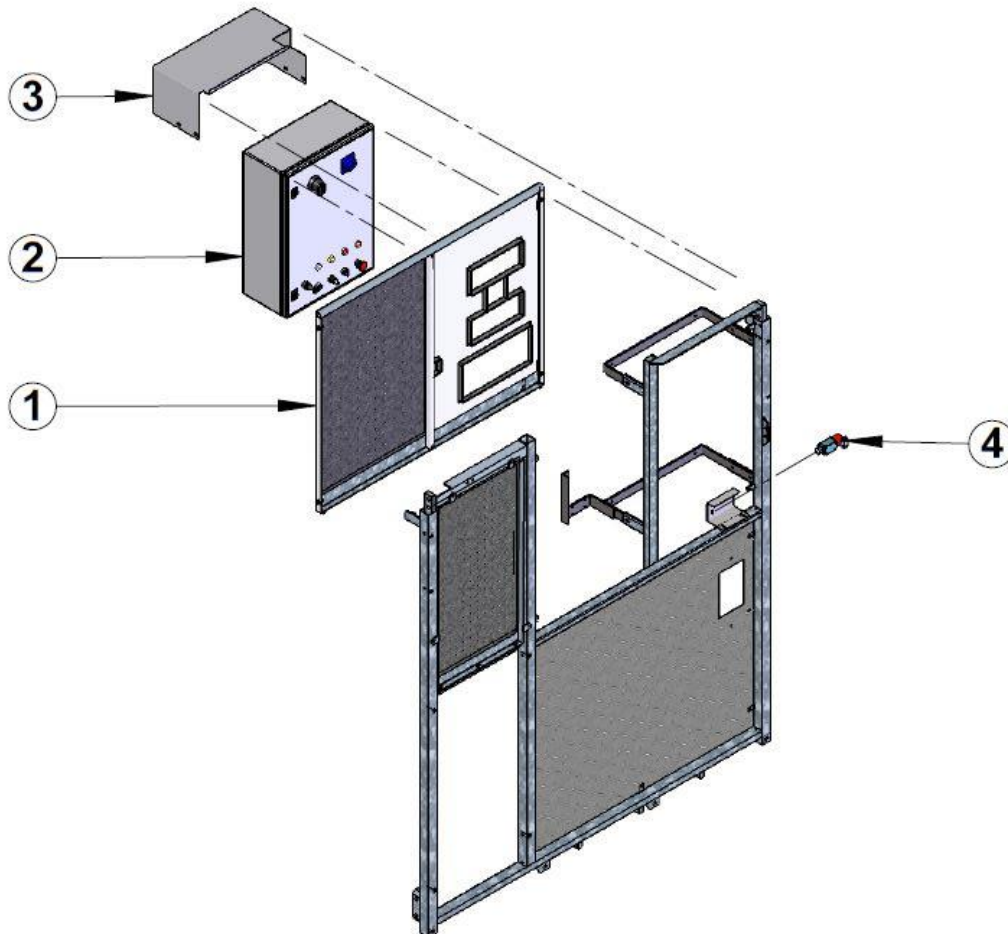

Item	Part Number	Description	Notes
--	##	Back Panel Assembly	----
1	##	Mast Guard	----
2	##	Cabin Controller Enclosure	----
3	##	Rain Hood	----
4	00000000001491	Keyed Limit Switch	----
5	10-985	Light Fixture	Not Shown

 
Erection Platform

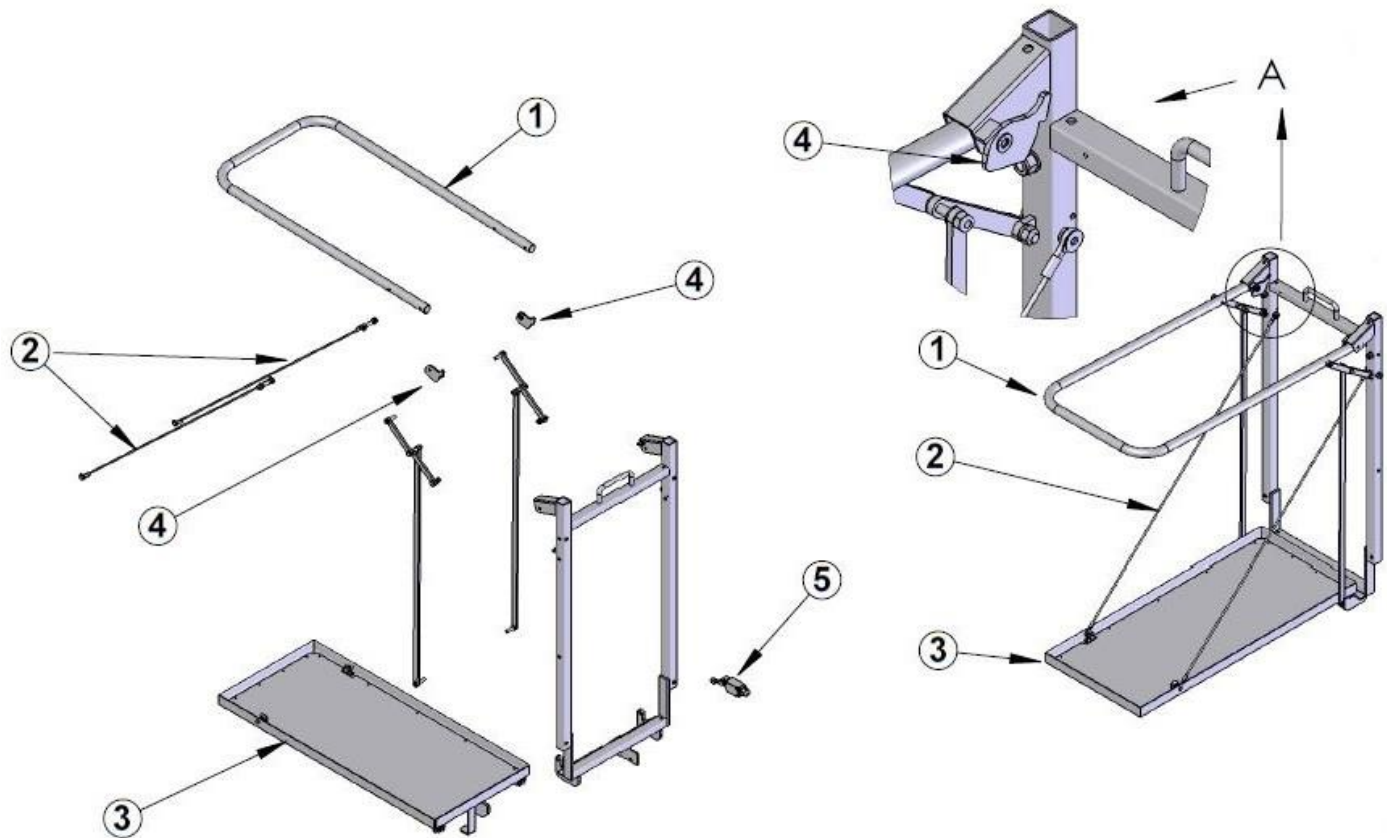

Item	Part Number	Description	Notes
--	##	Erection Platform Assembly	----
1	10-489	Erection Platform Hand Rail	----
2	##	Erection Platform Support Cables	----
3	##	Erection Platform Base	----
4	##	Erection Platform Latch	----
5	00000000001347	Limit Switch	----
--	10-490	Erection Platform Vertical Hinge	


Loading Gate Solenoid Assembly

 Entry Door Lock

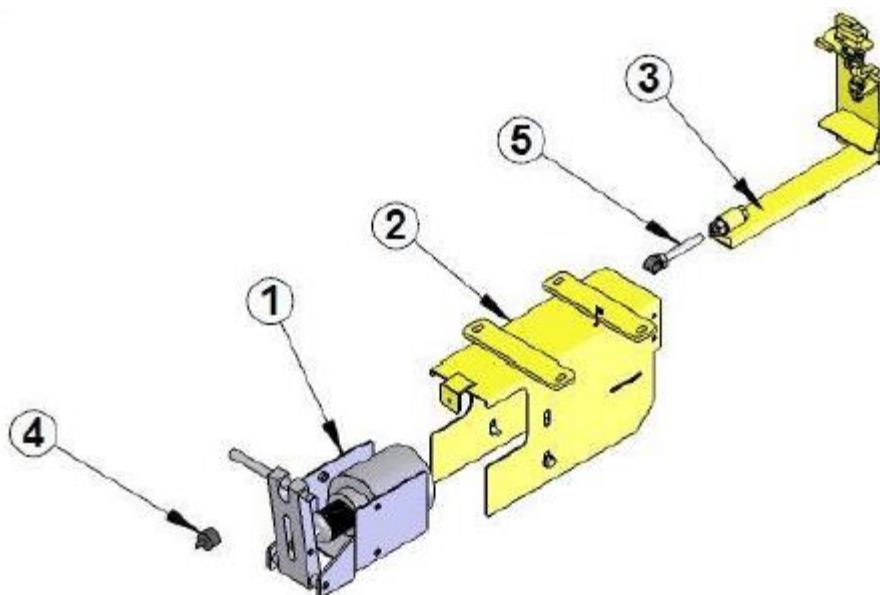


Item	Part Number	Description	Notes
--	10-966-1	Entry Door Lock Assembly	----
1	000000000001971	Solenoid, Cabin Door	----
2	10-487	Door Lock Frame	----
3	10-496	Mechanical Lock	----
4	##		----
5	##		----

 Exit Door Lock

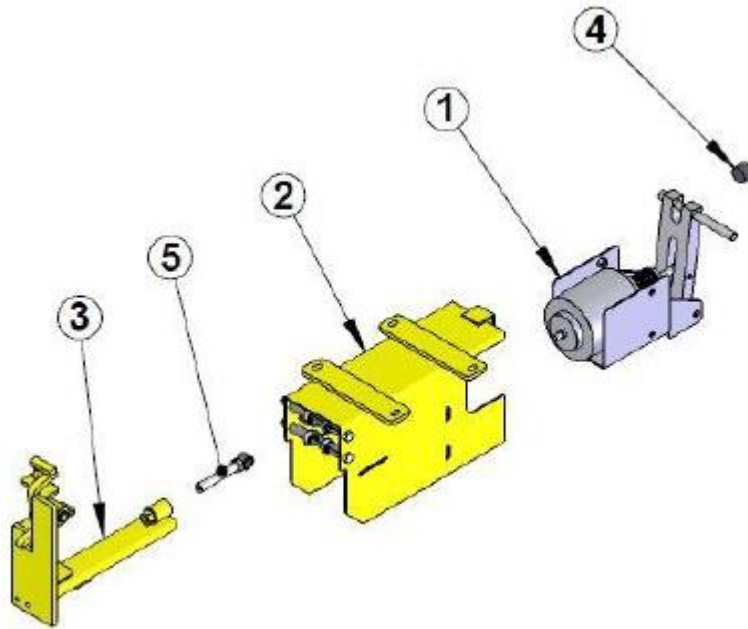


Item	Part Number	Description	Notes
--	10-966	Exit Door Lock Assembly	----
1	000000000001971	Solenoid, Cabin Door	----
2	10-488	Door Lock Frame	----
3	10-497	Mechanical Lock	----
4	##		----
5	##		----

 Section D – Lifting Unit

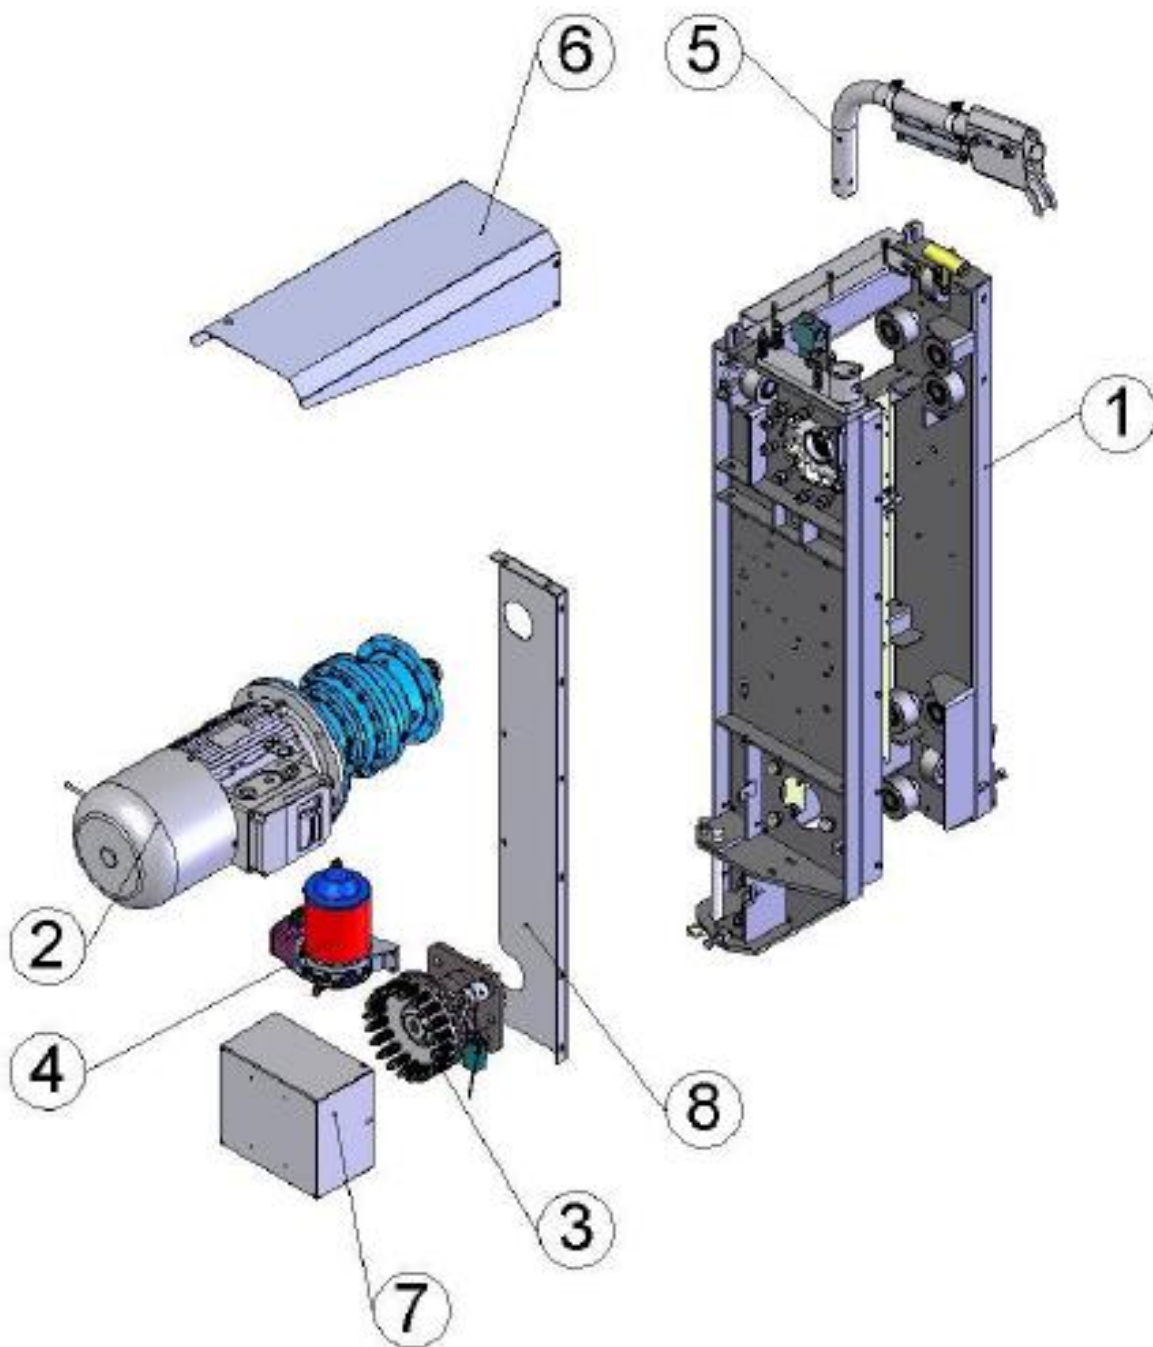


Item	Part Number	Description	Notes
--	##	Lifting Unit	----
1	##	Carriage	----
2	##	Motor/Transmission Assembly	----
3	10-970	Overspeed Device	----
4	10-268	Electric Greaser	----
5	10-267	Cable Support Arm	----
6	##	Motor Shroud	----
7	10-491	Overspeed Device Cover	----
8	##	Motor/OS Brake Pinion Guard	----
--	10-439	Cable Arm Support Reversal Brk	(Not Shown)

 Lifting Unit Breakdown

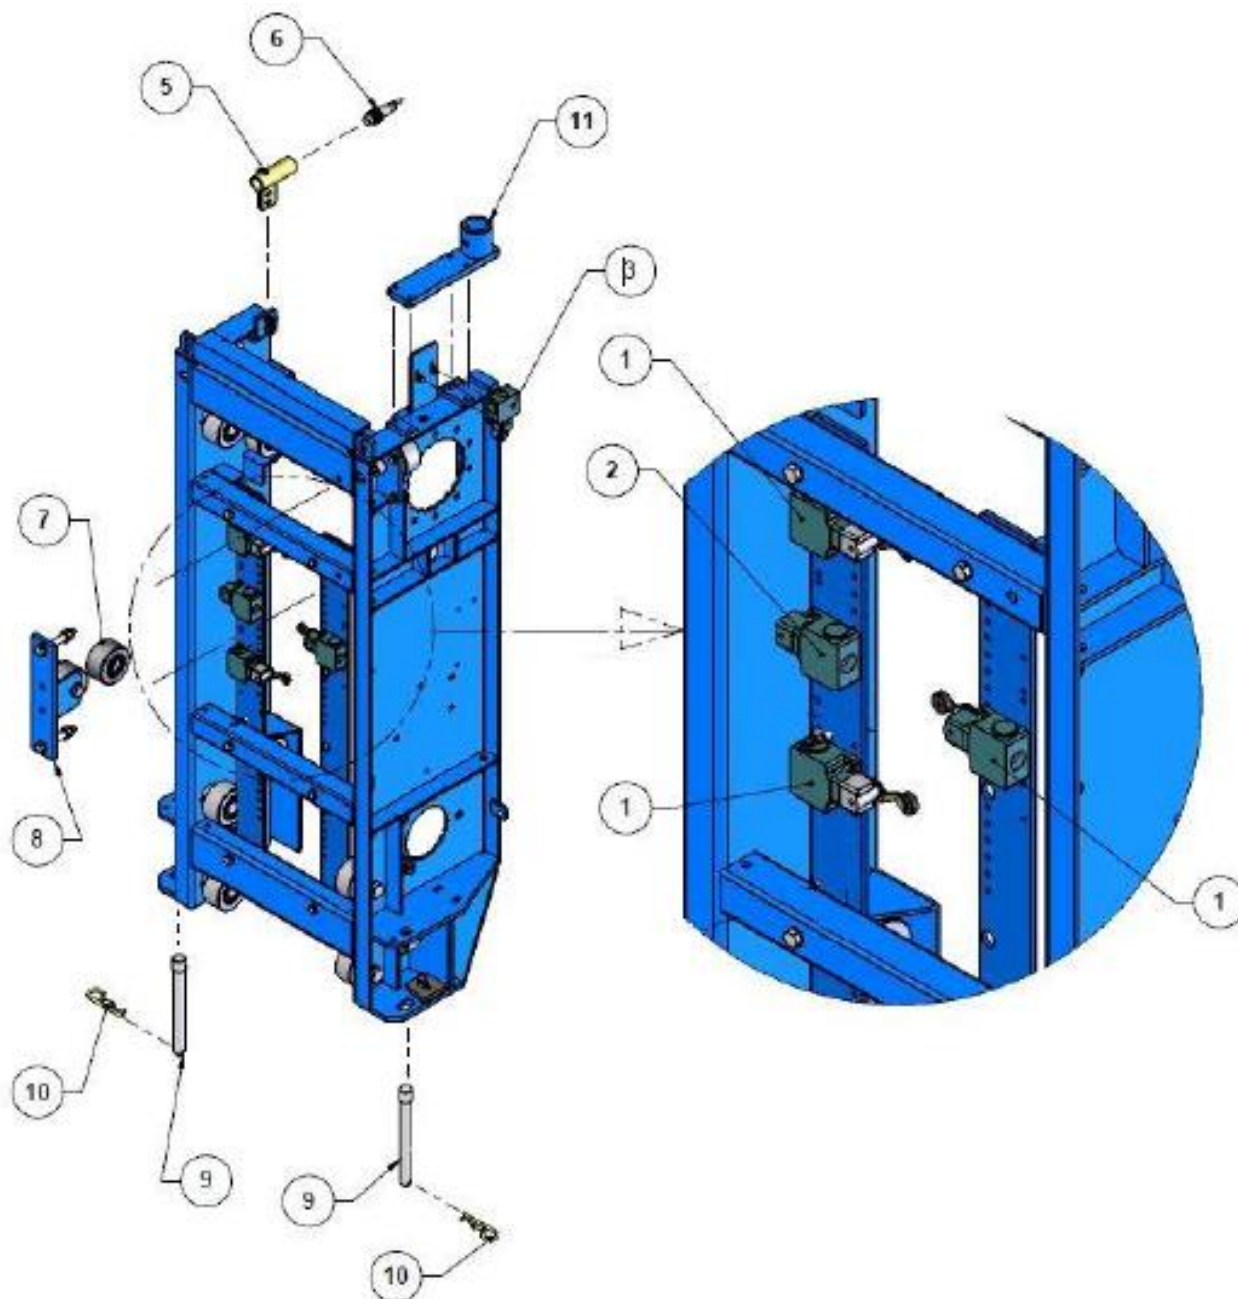


Item	Part Number	Description	Notes
1	000000000001372	Limit Switch, Floor Stop/Up/Down	----
2	##	Limit Switch, Over Travel	----
3	10-276	Limit Switch, Anti-tear	----
4	##	Mounting Bracket, Limit Switch	----
5	10-270	Bracket, No Mast Sensor	----
6	000000000001226	Sensor, No Mast	----
7	10-992	Leaf Roller w/ Bearing	----
8	10-991	Leaf Spring	----
9	##	Attachment Pin, Loading Unit	----
10	##	Attachment Pin Clip	----
11	10-264	Cable Arm Support Plate	----
--	10-439	Cable Arm Reversing Bracket	Not Shown

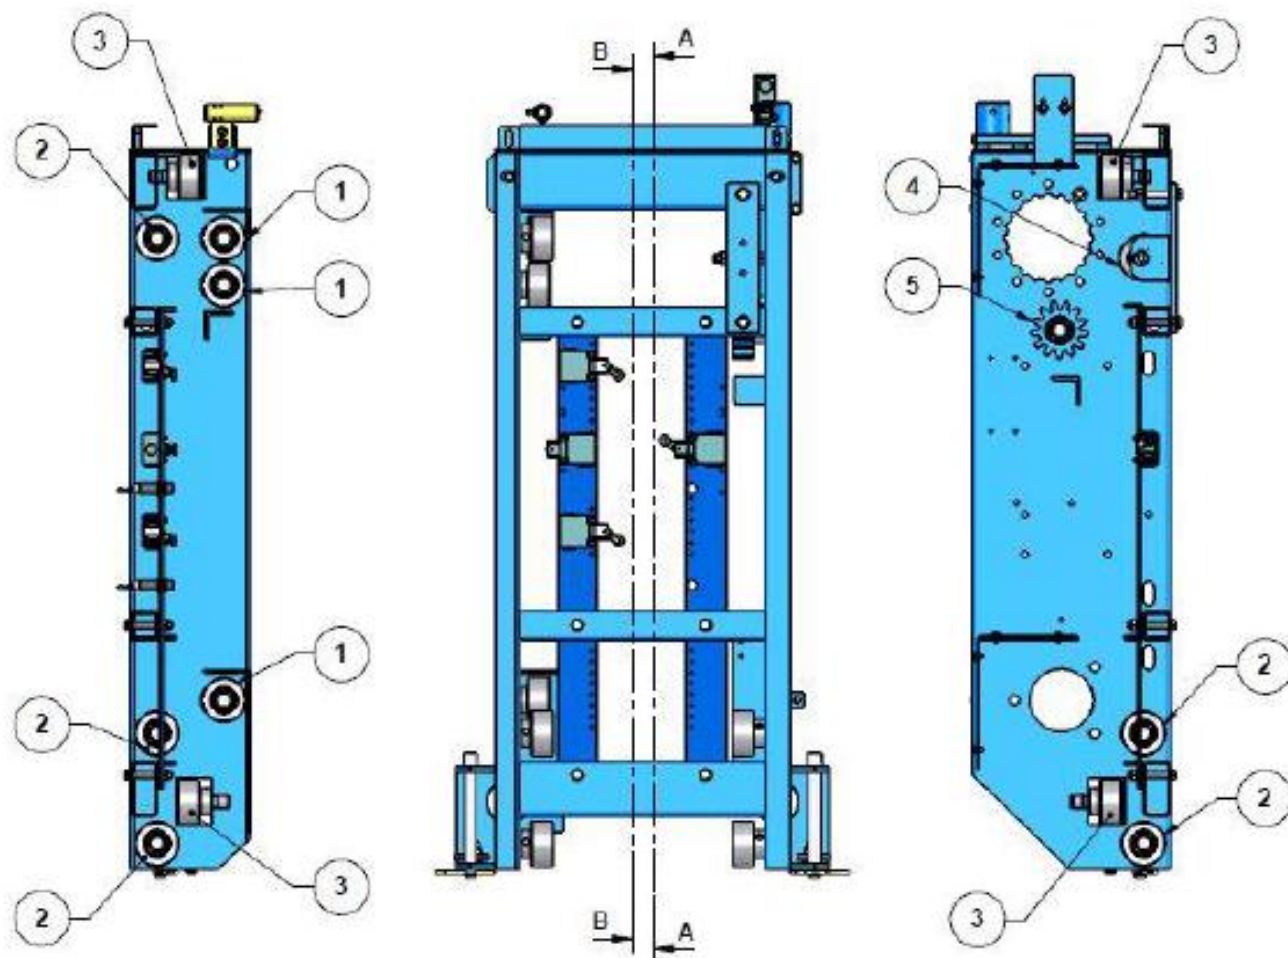 


Item	Part Number	Description	Notes
1	10-983	Guide Roller, Back	D2310031
2	10-967	Guide Roller, Front	D2310030
3	10-982	Guide Roller, Side	D2310028
4	10-992	Leaf Roller w/Bearing	AC350003
5	10-269	Gear, Pinion Idler	D2310745

 Cable Support Arm Bracket

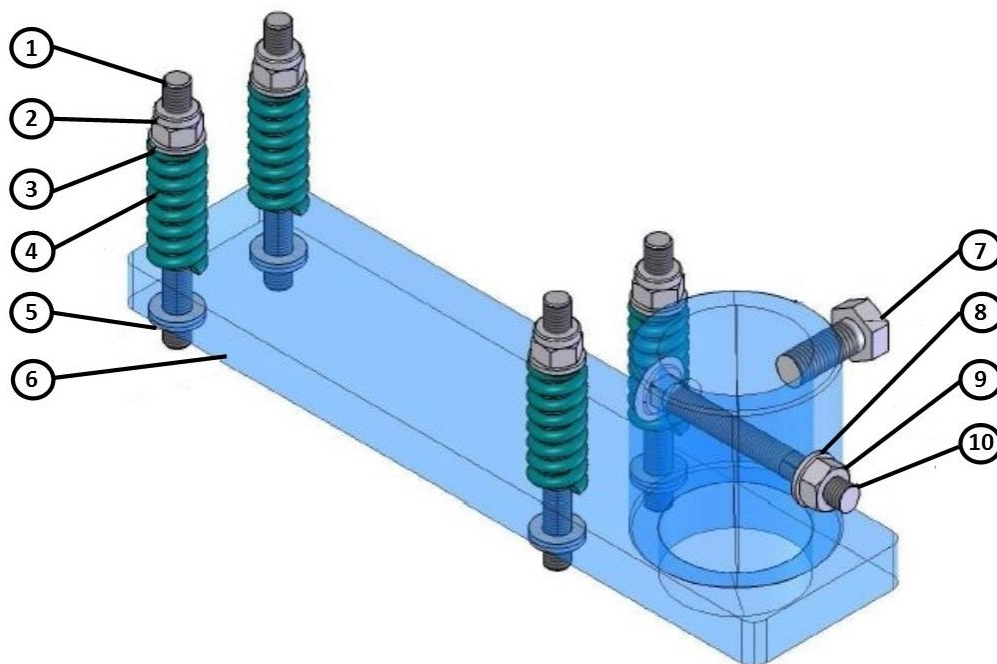


Item	Part Number	Description	Notes
--	30-391	Cable Support Arm Bracket Assembly	----
1	10-895	Spring Mounting Standoff	----
2	000000000001316	Nut M8 Nylock	----
3	000000000000016	Flat Washer M8	----
4	10-759	Springs	----
5	000000000000016	Flat Washer M8	----
6	10-264	Cable Support Arm Plate	----
7	000000000001946	Bolt M10 x 25mm	----
8	000000000000016	Flat Washer M8	----
9	000000000000581	Nut M8	----
10	000000000002212	Carriage Bolt M8 x 70mm	----

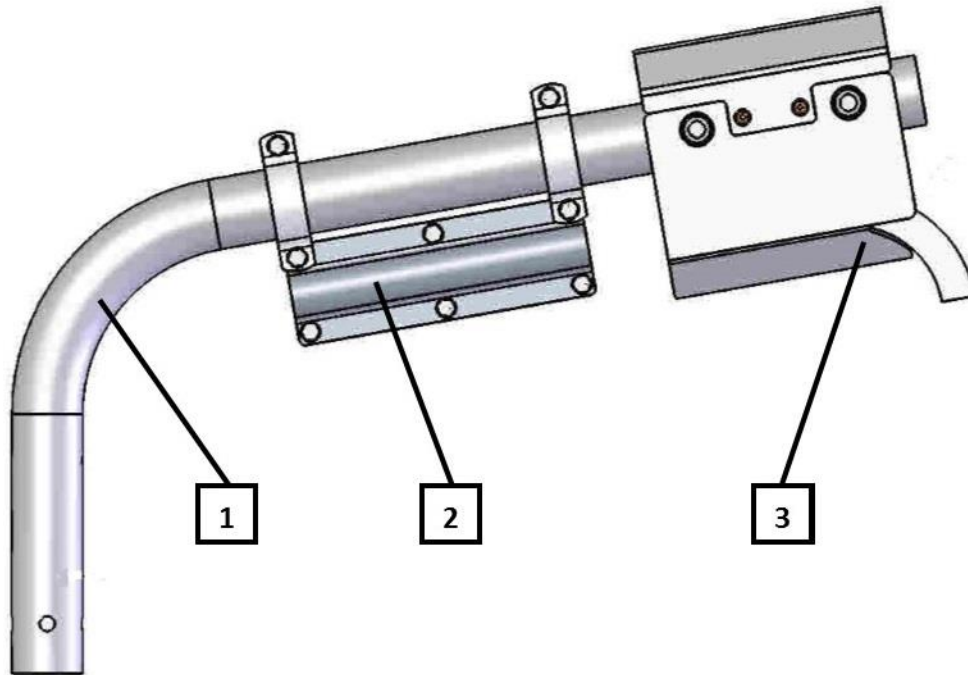 


Item	Part Number	Description	Notes
--	10-267	Gooseneck Assembly	----
1	##	Gooseneck Arm	----
2	10-993	Cable Clamp	----
3	##		----

 Motor/Transmission Assembly Breakdown

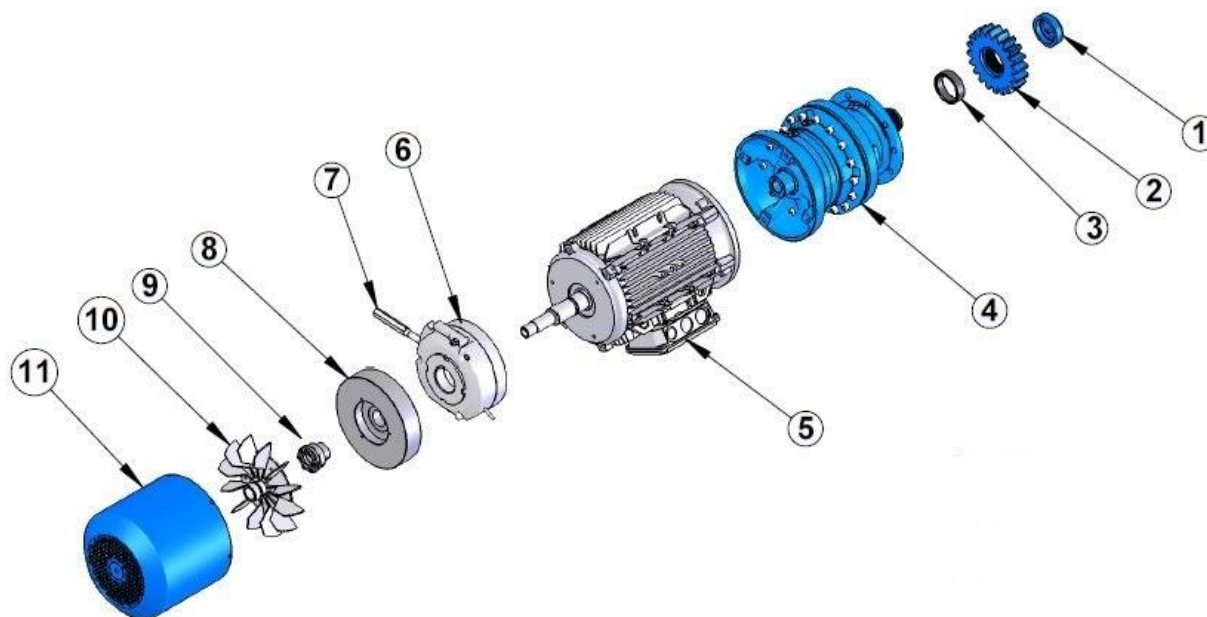

Item	Part Number	Description	Notes
1	10-277	Pinion Gear Lock	----
2	10-972	Pinion Gear	----
3	10-278	Pinion Spacer	----
4	##	Transmission	----
5	10-239	7.5Kw Electric Motor	----
6	10-769	Brake Coil	----
7	10-271	Brake Release Handle	----
--	10-897	Emergency Decent Handle	(Not Shown)
8	##	Balancer	----
9	##	Balancer Mounting Adapter	----
10	##	Cooling Fan	----
11	##	Fan Cover	----

 Over Speed Device

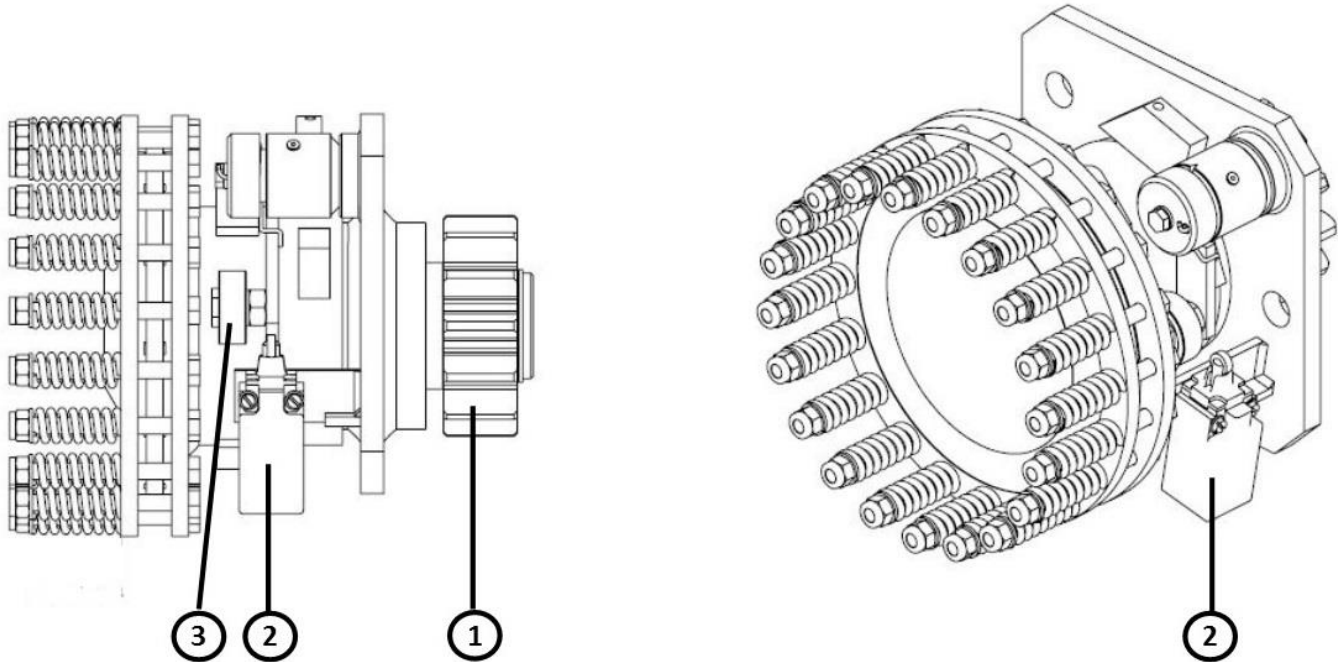


Item	Part Number	Description	Notes
--	10-970	Overspeed Brake Assembly	C1200372
1	10-971	Pinion Gear	----
2	00000000001533	Limit Switch	----
3	10-761	Roller, Brake Pawl w/Bearing	----




This page has been left blank for formatting purpose

 Section E – Electric Cable Guide Unit Cable Drum

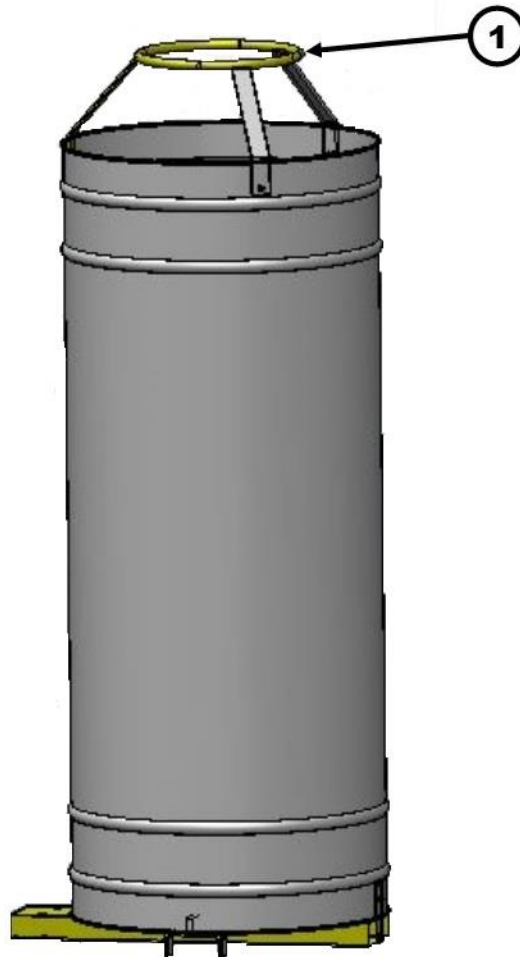

Item	Part Number	Description	Notes
--	10-953	500mm Cable Drum	----
--	10-584	700mm Cable Drum	----
1	10-953-1	500mm Cable Drum Ring	----
1	##	700mm Cable Drum Ring	----

 
Electric Cable Guide

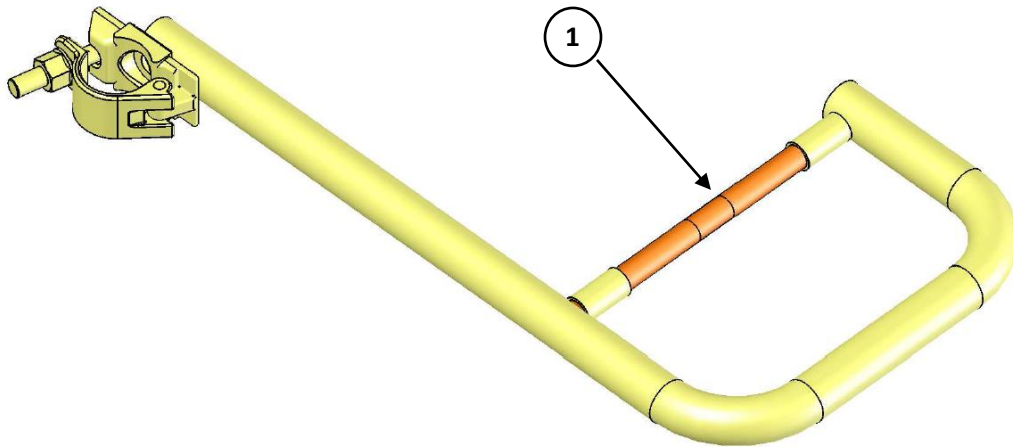

Item	Part Number	Description	Notes
--	30-949	Cable Guide	----
1	10-485	Fingers, Cable Guide	----


Section - F Wall Tie Assembly

 Wall Tie, Type I

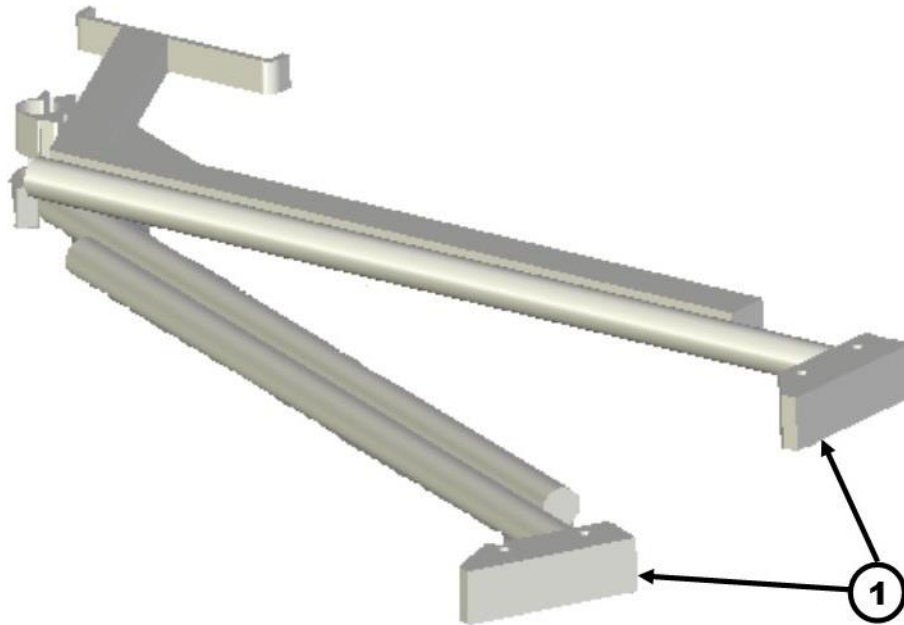

Item	Part Number	Description	Notes
--	10-237	Wall Tie Assembly, Type I	----
1	10-222	Wall Tie Foot	----

 
Wall Tie, Type II

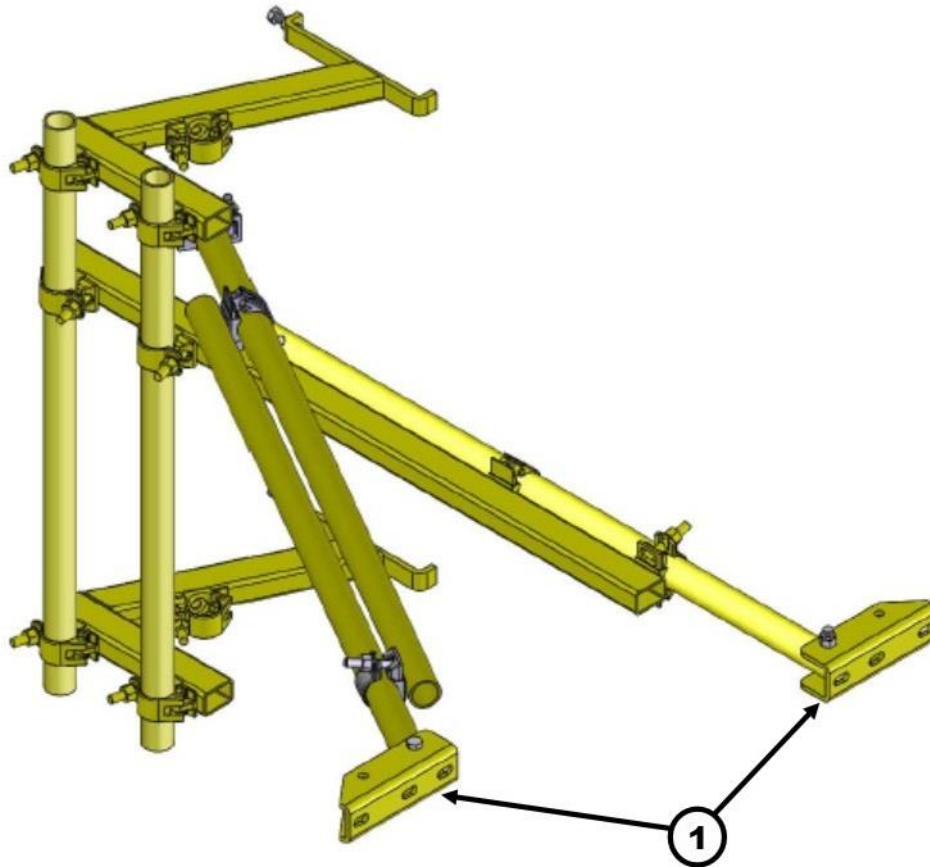


Item	Part Number	Description	Notes
--	10-887	Wall Tie Assembly, Type II	----
1	10-222	Wall Tie Foot	----

Section - G Electrical Components

 
Ground Enclosure

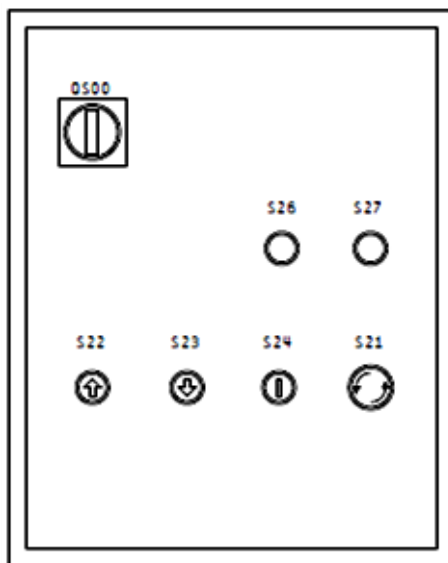

Item	Part Number	Description	Notes
--	10-883-1	Ground Enclosure Assembly 208V	----
QS00	00000000002065	Master Switch Handle	----
S26	00000000002076	Pushbutton Head (GN Solid)	----
S26	00000000002071	Mounting Base w/ 1 NO Contact	----
S27	00000000002075	Pushbutton Head (WT Solid)	----
S27	00000000002071	Mounting Base w/ 1 NO Contact	----
S22	00000000002084	Pushbutton Head (WT – BK “Up” Arrow)	----
S22	00000000002071	Mounting Base w/ 1 NO Contact	----
S23	00000000002077	Pushbutton Head (BK – WT “DN” Arrow)	----
S23	00000000002071	Mounting Base w/ 1 NO Contact	----
S24	00000000002078	Pushbutton Head (GN – WT “I” Mark)	----
S24	00000000002071	Mounting Base w/ 1 NO Contact	----
S21	00000000002074	Emergency Stop Pushbutton Head	----
S21	00000000002072	Mounting Base w/ 1 NC Contact	----

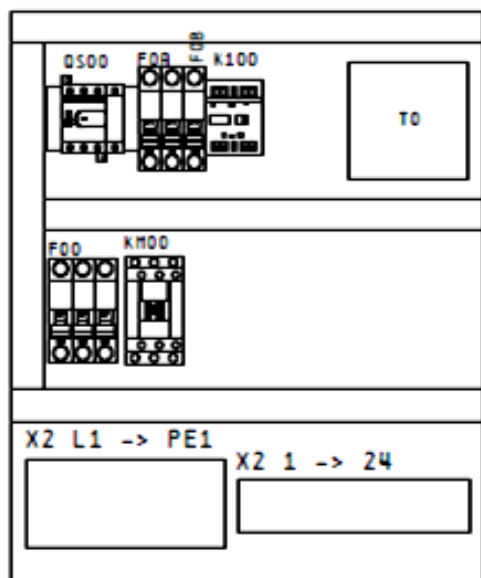 

Item	Part Number	Description	Notes
QS00	00000000002067	Master Switch	----
QS00	00000000002069	Master Switch Rod Adapter	----
F0A	##	Circuit Breaker 5SY42 D1	----
F0B	##	Circuit Breaker 5SY41 C4	----
K100	00000000002095	Contactor	----
T0	10-717	Transformer, 100VA Multi-Tap 0-24VAC	----
F00	##	Circuit Breaker 5SY43 D50	----
KM00	00000000002097	Contactor, 3PL 50A 400V 24V/60Hz	----
KM00	00000000002098	Auxiliary, FRT 10A 250V 1NC	----
KM00	00000000002064	Contactor Surge Suppressor	----

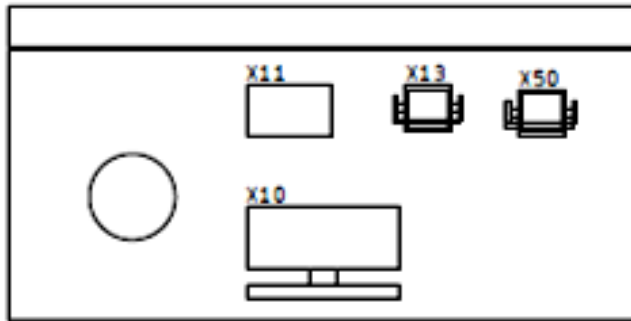 


Item	Part Number	Description	Notes
X10	##	Base 24B Bulkhead MT Single Lever	----
X10	000000000001862	Insert 24B 4-8 Female	----
X11	000000000001871	Base 6B Bulkhead MT Single Lever	----
X11	000000000001875	Insert 6B 6 Pole Female	----
X13	000000000000233	Base 4B Bulkhead MTG Single Lever	----
X13	000000000000242	Insert 4 Pole Female	----
X50	000000000000233	Base 4B Bulkhead MTG Single Lever	----
X50	000000000000242	Insert 4 Pole Female	----




This page has been left blank for formatting purposes

 Landing Call Box

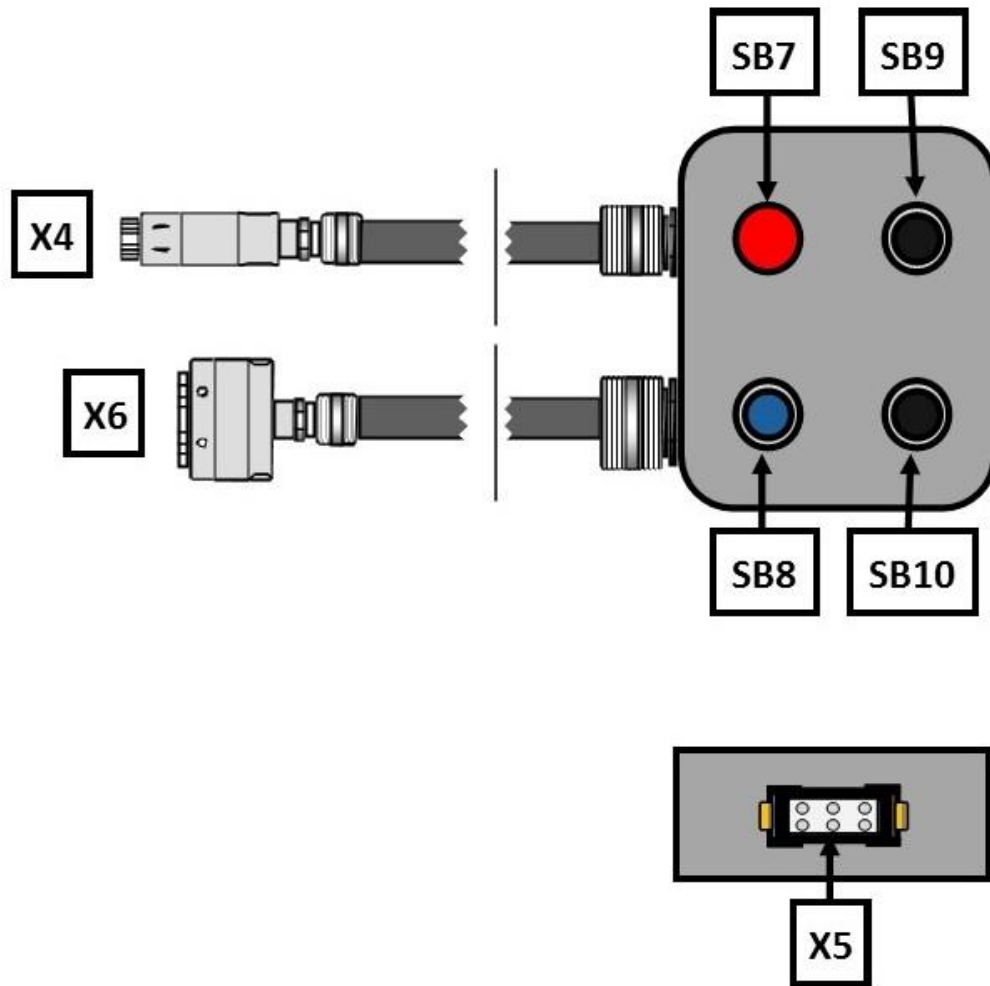


Item	Part Number	Description	Notes
--	30-948	Floor Call Box Assembly	Includes all items bellow
X4	00000000001286	Hood, Cable to Cable 4 Pin	----
X4	00000000000242	Insert 4B Female	----
X6	00000000001872	Hood 6B Top ENT PG16 MT SNGL	----
X6	00000000000831	Insert 6B 6 Pole Male	----
SB7	30-954	E-Stop Assembly	----
SB7	00000000001519	Contact Block N.C.	----
SB8	00000000001755	Pushbutton BLU	----
SB8	00000000001729	Contact Block N.O.	----
SB9	00000000001720	Pushbutton BLK	----
SB9	00000000001729	Contact Block N.O.	----
SB10	00000000001720	Pushbutton BLK	----
SB10	00000000001729	Contact Block N.O.	----
X5	00000000001871	Base 6B Bulkhead MT SNGL Lever	----
X5	00000000001875	Insert 6B 6 Pole Female	----

 Cabin Enclosure

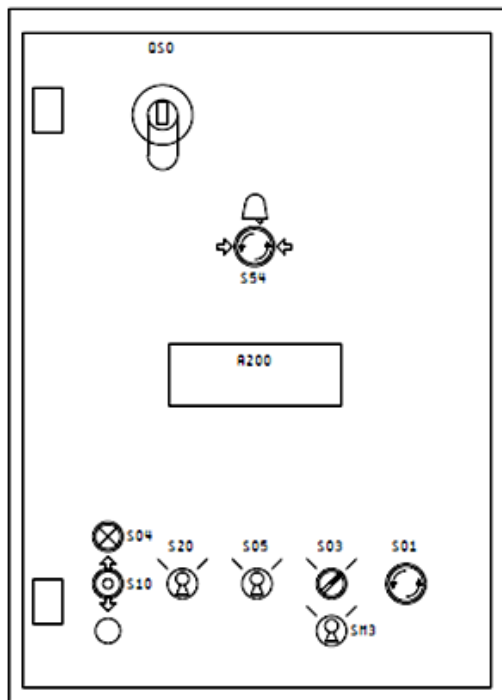

Item	Part Number	Description	Notes
QSO	00000000002066	Master Switch Handle	----
S54	00000000002089	Pushbutton Head (YW Solid)	----
S54	00000000002072	Mounting Base w/ 1 NC Contact	----
A200	10-716	Alarm/Status Board	----
S04	00000000002083	Pushbutton Head (GN Transparent)	----
S04	00000000002082	LED Mounting Base w/ 1 NC Contact	----
S10	00000000001271	Joystick w/ Mount	----
S10	00000000002039	NO Contact Block	----
S10	00000000002039	NO Contact Block	----
S20	##	Key Selector Switch Head	----
S20	00000000002071	Mounting Block w/ 1 NO Contact	----
S20	00000000002073	NO Contact Block	----


Item	Part Number	Description	Notes
S20	00000000002073	NO Contact Block	----
S05	00000000002085	Key Selector Switch Head	----
S05	00000000002086	Switch Fixing Adapter	----
S05	00000000002087	NO Contact Block	----
S05	00000000002087	NO Contact Block	----
S05	00000000002276	Key	----
S03	00000000002079	Selector Switch Head (BK)	----
S03	00000000002071	Mounting Base w/ 1 NO Contact	----
S03	00000000002073	NO Contact Block	----
S01	00000000002074	Emergency Stop Pushbutton Head	----
S01	00000000002072	Mounting Base w/ 1 NC Contact	----
SM3	00000000002081	Key Selector Switch Head	----
SM3	00000000002071	Mounting Base w/ 1 NO Contact	----
X100	##	Blue Power Receptacle	----
X100	##	Cover	----

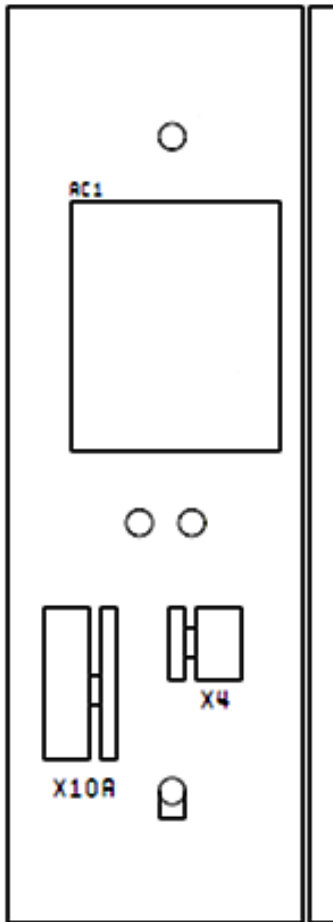 

Item	Part Number	Description	Notes
AC1	10-948	Overload Computer	Includes (2) Transducers
--	00000000002198	Fuse Holder for AC1	Not Shown
X4	00000000001871	Base 6B Bulkhead MT Single Lever	----
X4	00000000001875	Insert 6B 6 Pole Female	----
X10A	##	Base 24B Bulkhead MT Single Lever	----
X10A	00000000001861	Insert 24B 4-8 Male	----



 This page has been left blank for formatting purposes

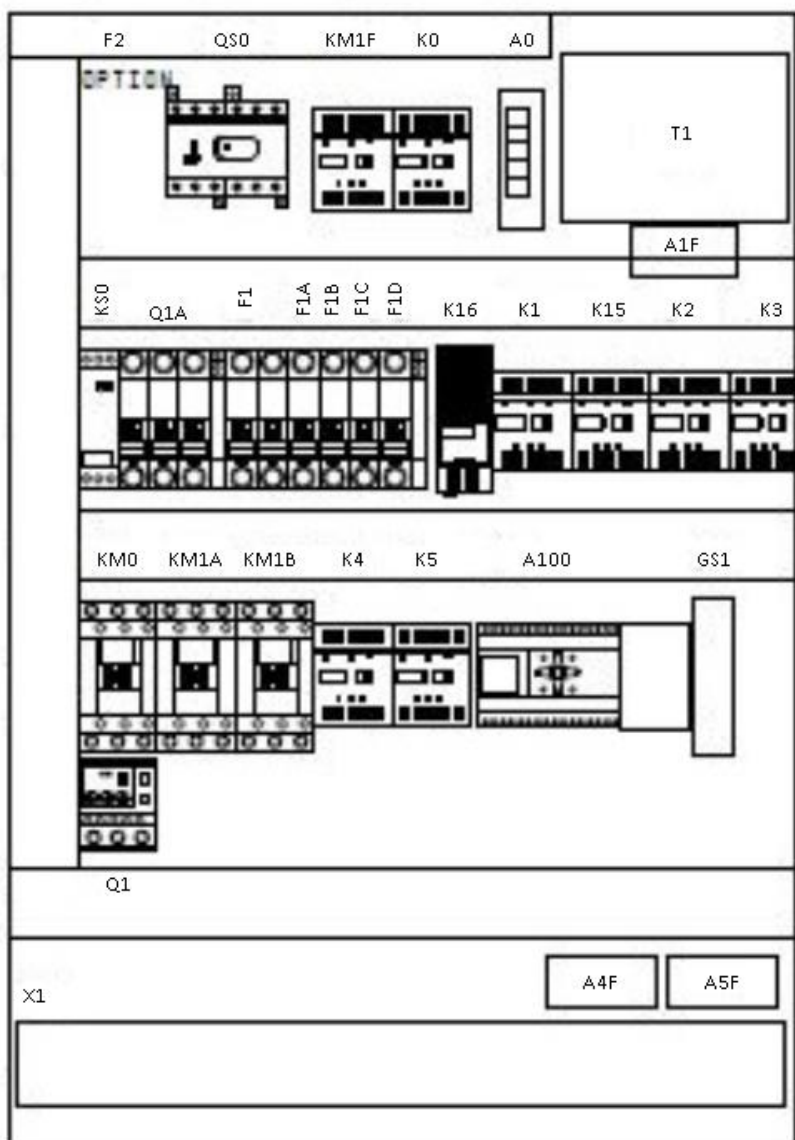


Item	Part Number	Description	Notes
QS0	00000000002068	Master Switch, 3PL 40A DT	----
QS0	00000000002069	Master Switch Rod Adapter 235MM	----
KM1F	00000000002100	Contactor, 3PL 9A 400V 1NC 24V/60Hz	----
K0	00000000002094	Contactor, 10A 230V 2NO+2NC 24V/60Hz	----
A0	##	Hour Meter	----
T1	10-718	Transformer, 500VA Multi-tap 0-24V 0-230V	----
A1F	00000000002103	Motor Brake Rectifier	----
KS0	00000000002093	Phase Monitor, 3X 160-690V 1CO	----
Q1A	##	Circuit Breaker 5SY43 D50	----
Q1A	##	Auxiliary, Side 5ST301 AS	----
F1	##	Circuit Breaker 5SY42 D4	----
F1A	00000000002167	Circuit Breaker 5SY61 C6	----
F1B	00000000002154	Circuit Breaker 5SY61 C2	----
F1C	00000000002154	Circuit Breaker 5SY61 C1	----
F1D	##	Circuit Breaker 5SY61 C1	----
F1D	##	Auxiliary, Side 5ST301-AS	----
K16	00000000002092	Relay, MY2-24VAC (S)	----
K16	00000000002090	Relay Base	----
K16	00000000002091	Relay Lock	----
K1	00000000002094	Contactor, 10A 230V 2NO+2NC 24V/60Hz	----
K15	00000000002095	Contactor, 3PL 10A 230V 3NO+1NC 24V/60Hz	----
K2	00000000002094	Contactor, 10A 230V 2NO+2NC 24V/60Hz	----
K3	00000000002094	Contactor, 10A 230V 2NO+2NC 24V/60Hz	----
KM0	00000000002055	Contactor, 3PL 38A 400V 1NO+1NC 24V/60Hz	----
KM0	00000000002102	Auxiliary, FRT 10A 240V 4NO	----

Item	Part Number	Description	Notes
Q1	00000000002070	Motor Overload, 10-40A 1NO+1NC	----
KM1A	00000000002055	Contactor, 3PL 38A 400V 1NO+1NC 24V/60Hz	----
KM1A	00000000002099	Auxiliary, SIDE 10A 240V 1NO+1NC	----
KM1A	00000000002101	Auxiliary, FRT 10A 240V 2NO	----
KM1A	00000000002096	Wiring Kit w/Mechanical Interlock	----
KM1B	00000000002055	Contactor, 3PL 38A 400V 1NO+1NC 24V/60Hz	----
KM1B	00000000002099	Auxiliary, SIDE 10A 240V 1NO+1NC	----
KM1B	00000000002101	Auxiliary, FRT 10A 240V 2NO	----
K4	00000000002095	Contactor, 3PL 10A 230V 3NO+1NC 24V/60Hz	----
K5	00000000002095	Contactor, 3PL 10A 230V 3NO+1NC 24V/60Hz	----
A100	10-894	Smart Relay, SR2 w/Clock	----
GS1	00000000002056	Regulator, 12VDC/2A	----
A4F	00000000001972	Rectifier, Door Lock 1A 500V	----
A5F	00000000001972	Rectifier, Door Lock 1A 500V	----



This page has been left blank for formatting purposes

 
Drop Test Pendant

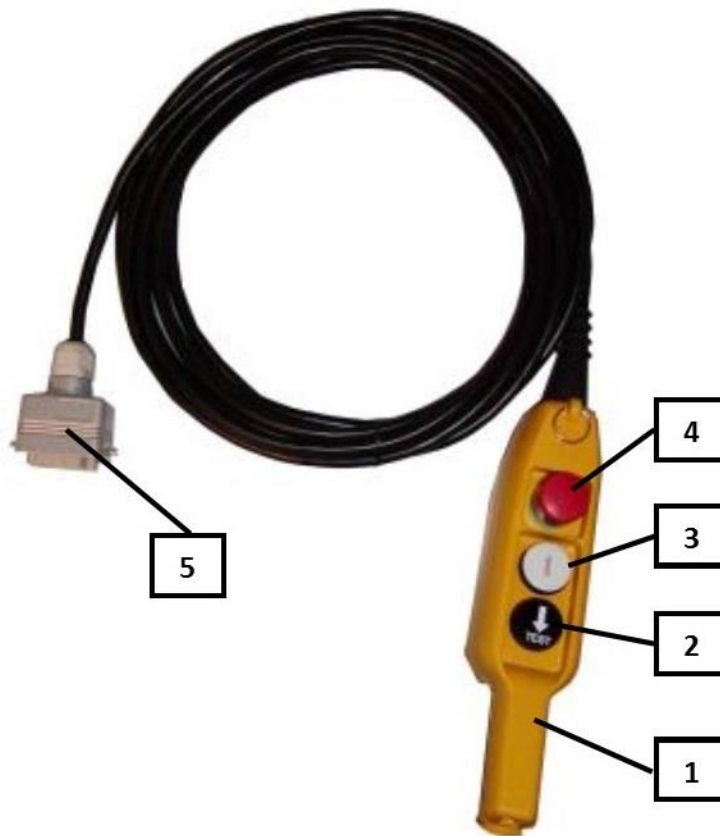

Item	Part Number	Description	Notes
--	30-963	Drop Test Pendant Assembly	----
1	000000000001711	Pendant Housing	Includes Items 2-4
2	##	Pushbutton BLK w/ DOWN Arrow	----
3	##	Pushbutton WHT w/ UP Arrow	----
4	000000000001025	Pushbutton Emergency Stop	----
5	000000000000841	Hood 6B Top Entry PG16	----
5	000000000000831	Insert 6B Male	----


Section H - Accessories

 Unit Lifting Eye

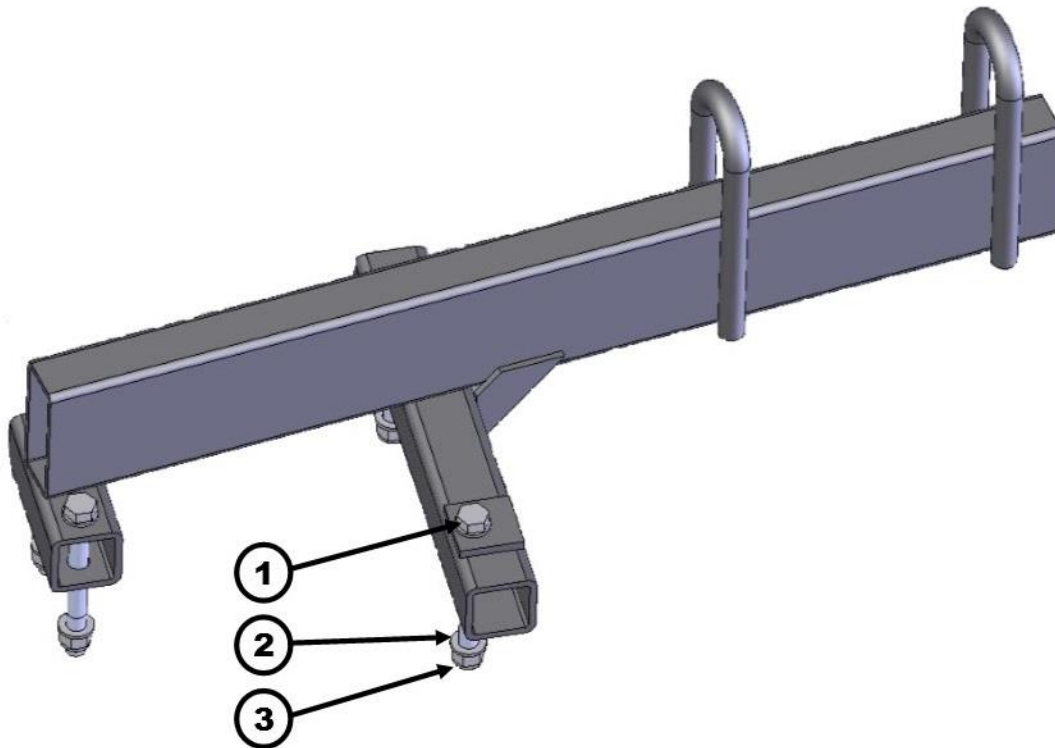

Item	Part Number	Description	Notes
--	10-947	Unit Lifting Eye	----
1	10-322	Bolt, 16mm x 160mm	----
2	00000000001017	Washer, 16mm	----
3	00000000001015	Nut, 16mm Nylock	----

 Reversible Landing Gate

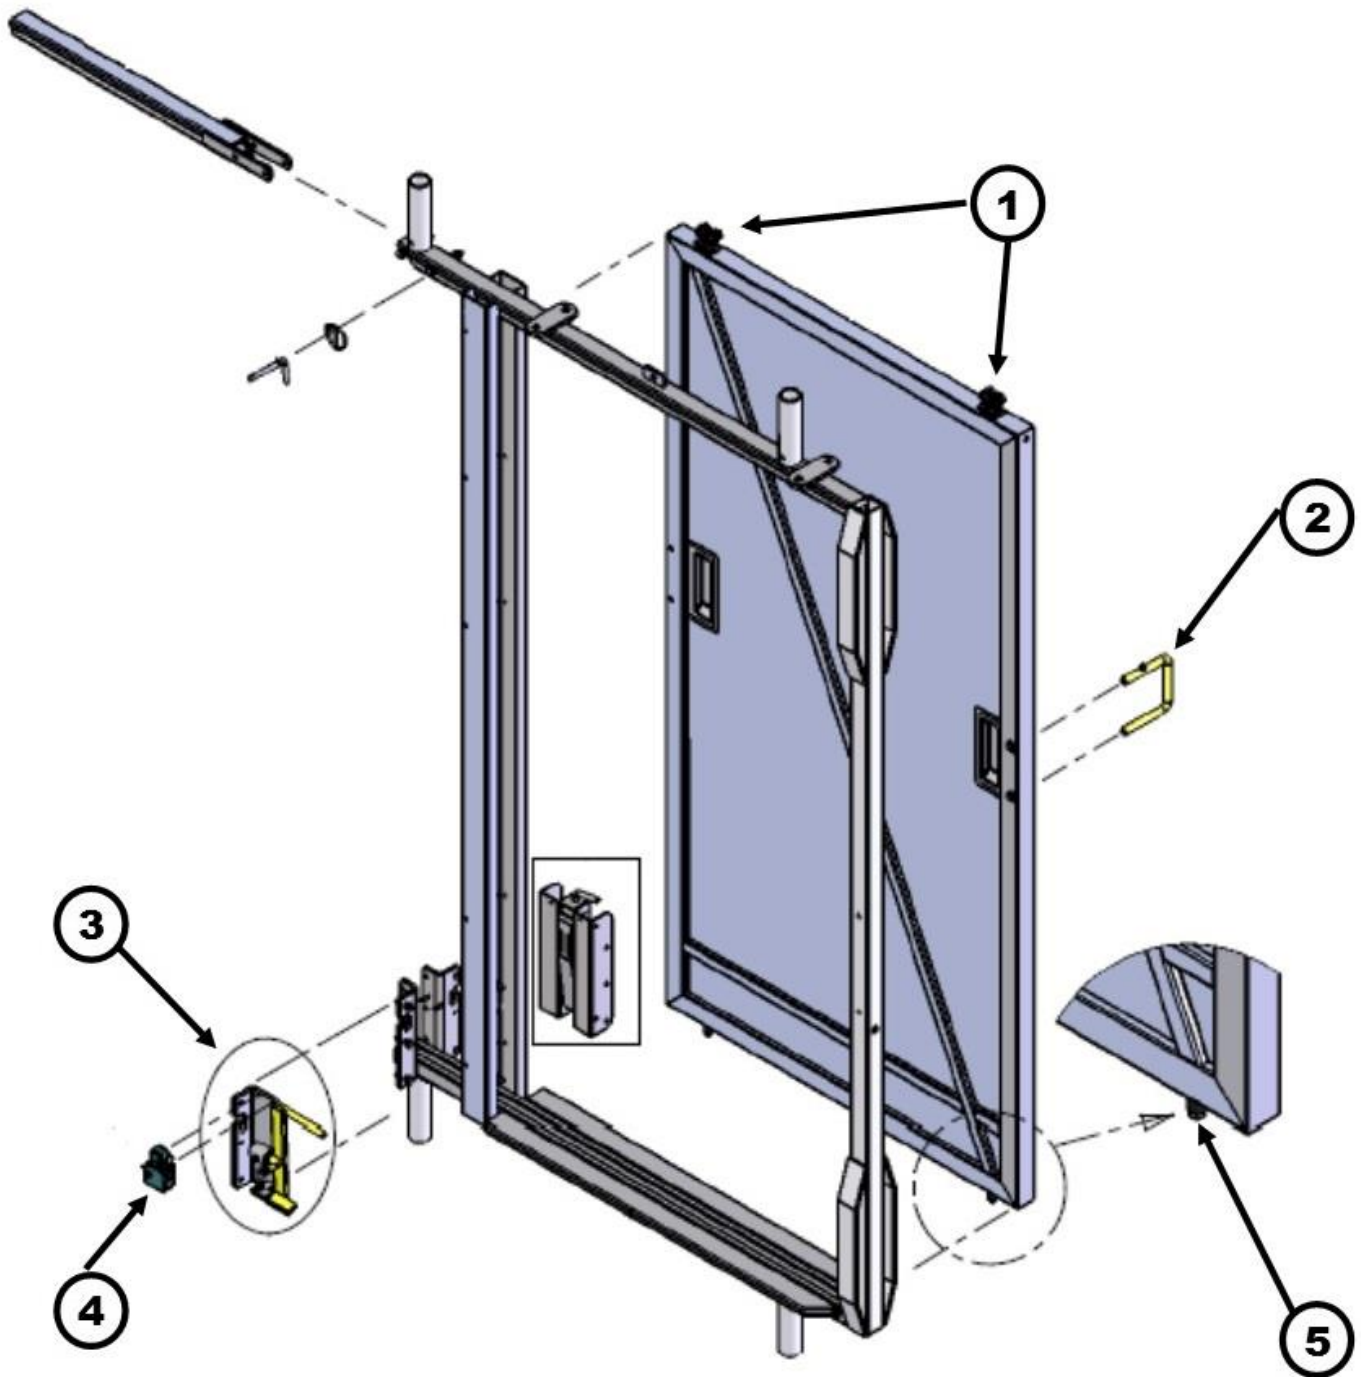

Item	Part Number	Description	Notes
--	10-884	Landing Gate, Reversible	----
1	10-392	Sliding Door Guide Rollers	----
2		Sliding Door Handle	----
3	10-892	Reversible Interlock Bracket	Needed to reverse the door direction
4	00000000002123	Limit Switch	----
5		Sliding Door Guide Pin	----